



PAGERY PULSE

Instrukcja Obsługi

Device Features:

- 4-digit display on each pager
- 3 different notification modes
- Sound signal, vibration, LED signal
- Adjustable notification time 1-99s or continuous
- Built-in clock
- Convenient charging system
- 1 Charging Station can charge 10 pagers simultaneously

Technical Specifications

Keyboard	
Display resolution	128 x 64
Number of queueing numbers	4
Dimensions	92 mm x 136 mm x 27 mm
Weight	0,18 kg (with power adapter)

Pager	
Operating modes	3x: sound, vibration, LED (red color)
Operating frequency	433,92 MHz
Display	4 characters
Low battery signal	LO symbol display
Dimensions	Diameter 10 cm
Weight	0,08 kg

Charging Station	
Operating voltage	7,5V/1,5A
Number of pagers charged	10
Signal reception range	500 m
Dimensions	Diameter 10 cm
Weight	0,18 kg (with power adapter)

Basic Functions

F-00	Programming/Registration
F-01	Alarm Mode
F-02	Alarm Time
F-03	Clock
F-04	"Out of Range" Signal
F-05	Deleting/Clearing

Note: To ensure proper functioning of S900 pagers, hold button [2] on the keyboard while connecting the power supply. This ensures the correct programming mode is selected.

Short Description of Functions

1. Each pager has four buttons on the back:
[STOP] [ENT] [FUN] [LEARN]

Detailed Description of Functions

F-00 Programming/Registration

1. Hold [LEARN] until [---] appears on the display.
2. Select a number on the keyboard (1-999).
3. The display will show the chosen number and emit a sound for about 3 seconds.
4. The pager is now correctly programmed.
5. Each pager can be assigned only one unique identification number.

F-01 Alarm Mode

1. Hold [FUN] for 3 seconds until [F1] appears on the display.
2. Hold [ENT] until [111] appears on the display.
3. The first digit [100] indicates sound alarm mode.
 - a. The second digit [010] indicates LED alarm mode.

- b. The third digit [001] indicates vibration alarm mode.
4. Press [FUN] to switch between digits and [ENT] to change values.
 - a. Value [1] means the function is ON.
 - b. Value [0] means the function is OFF.
5. Hold [STOP] to save settings.
6. Hold [FUN] for 3 seconds to cancel settings.

F-02 Alarm Time

1. Hold [FUN] for 3 seconds until [F1] appears.
2. Hold [FUN] again until [F2] appears.
3. Hold [ENT] until [10] appears (default alarm time in seconds).
4. Use [FUN] and [ENT] to adjust the alarm duration (00-99 seconds).
Enter [00] for continuous alarm.
5. Hold [STOP] to save settings.
6. Hold [FUN] for 3 seconds to cancel settings.

F-03 Clock

1. Hold [FUN] for 3 seconds until [F1] appears.
2. Hold [FUN] again until [F2] appears.
3. Hold [FUN] again until [F3] appears.
4. Hold [ENT] to display the current time setting.
5. Use [FUN] and [ENT] to set the correct time.
6. Hold [STOP] to save settings.
7. Hold [FUN] for 3 seconds to cancel settings.

F-04 "Out of Range" Signal

1. Hold [FUN] and [ENT] together until [000] appears.
2. Use [FUN] and [ENT] to enter [900].
3. Hold [STOP] until [1] or [0] appears.
 - o Value [1] enables the function.
 - o Value [0] disables the function.

4. Hold [STOP] to save settings.
5. Hold [FUN] for 3 seconds to cancel settings.
6. To quickly disable this function, press [STOP], [ENT], [FUN] in order.
To re-enable, repeat the full setup process.

F-05 Deleting/Clearing

1. Hold [FUN] and [ENT] together until [ooo] appears.
2. Use [FUN] and [ENT] to enter [901].
3. Hold [STOP] until [oo1] appears.
4. Hold [STOP] to save settings.

Additional Information

1. If the pager has a low battery, it will not receive signals from the keyboard. It will signal this by blinking red LEDs and displaying "LO" on the screen.
2. If the pager is charging, it will not receive signals from the keyboard but will display its ID number.

Package Contents

Item	Quantity
Keyboard	1 pc
Charging Station	1 pc (for 10 pagers)
Pager	Depending on order (min. 10 pcs)
User Manual	1 pc